


English GuidePart Names


• The numbers shown in the symbols are the page numbers where part functions and/or use are explained in Japanese.




Front View

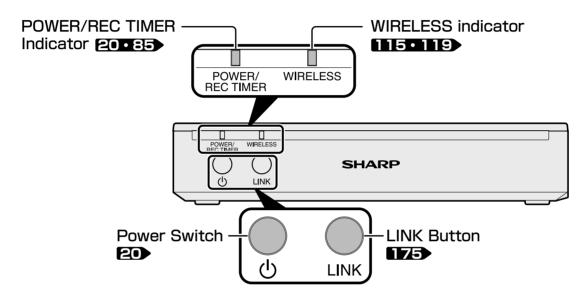

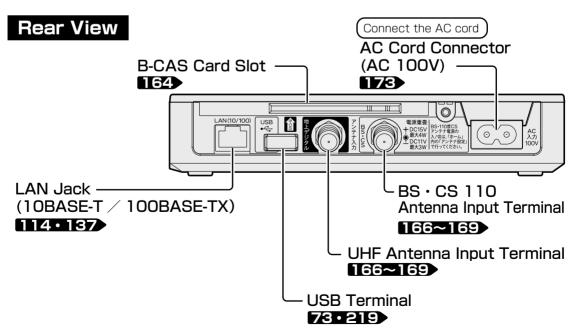



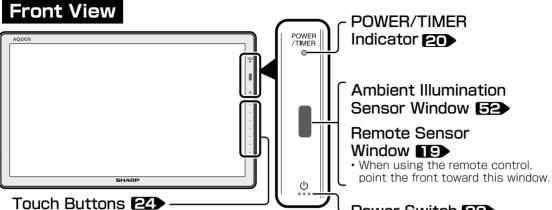


• The button functions change depending on the usage mode of the unit. (When the touch buttons are pressed, icons showing the functions are displayed on the screen.)

Power Switch 20

· Switch ON/OFF the unit by touching the "..." switch.

Rear View

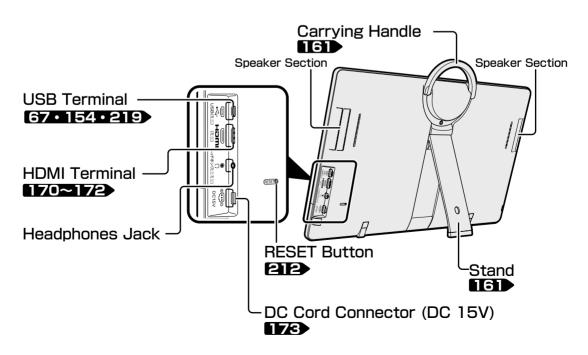

Remote Control Unit Active/Standby 20 Press to turn on the TV set in active or standby mode. Channel $Up(\Lambda)/$ Volume Up(+)/ Down(∨) ■ 電源 Down(-) · Press to select channels Press to adjust the volume. in ascending or descending order. My Circle 26 選局 **%CATV** channels are · Press to display factory set to be skipped. "My Circle". Enter/Confirm マイサークル Press to confirm a Display the selected setting or Tool Menu (29) menu item. Display the "Home" Cursor (up. down, left, right)/ Menu 29 決定 Jog Dial Section - Press to start some See the below. useful TV functions. 嵇 Finish -Return · Press to finish a Press to go back to 番組表 データ menu operation. the previous screen. d etc. Linked Data Broadcast **EE** Press to show the data broadcast linked with Number Kev AQUOS the current digital TV Button **F** program. Press to display SHARP the number key panel EPG ESP when inputing number. Press to display or turn off the Electronic Color Buttons -Program Guide Use to operate EPGs and data program screens. (EPG: 番組表) when receiving a digital broadcast.

Cursor and Jog Dial Section



Cursor (up, down, left, right)

• Use to select a menu item, column, etc.



Jog Dial

- · Turn to use.
- Can be used for "My Circle", program selection, etc.

26 • 30 • 39

• Can be used in place of the cursor in some cases.

Switching the Display Language to English ホームメニューなどの言語を英語にする

 Using the Home menu screen, you can switch the on-screen display language to English.

ホームメニューなどの画面表示を英語にすることができます。



Select"設定"(Setup) on

ホームメニューから「設定」

設定

the Home menu.

を選ぶ

with





Select "Language(言語)". 「Language(言語)」を選ぶ



Select "English". 「English」を選ぶ

Select Enter. 決定する



決定





- · The menu screen is now displayed in English.
- ・画面表示が英語になります。

Finish this operation. 終了する




Press





ππ-



プチャンネル



Press

and

select with











誤ってホームメニューを英語にしてしまったと きは

ホームメニューから「Setup」 − 「* (View Setting)」 - 「言語 (Language)」を選ん で決定し、「日本語」を選んで決定すると日 本語になります。